

### Testing precautions

Once the fitting is permanently connected to the mains supply, a commissioning discharge test as required in AS/NZS 2293.2 must be carried out. You will need to allow 24 hours for the battery to fully charge prior to conducting this test, presently (at the time of writing), the standard requires that fittings operate in emergency mode for a period not less than 2 hours for their commissioning test and for not less than 90 minutes thereafter (it is required that 6 monthly discharge tests be carried out). You will need to keep the records for the commissioning test and enter them into the building emergency services logbook or via other recording methods as allowed by AS/NZS 2293.2.

### Construction sites

Continuously switching off the mains power supply that is connected to emergency light fittings during the construction phase of an installation will cause these fittings to discharge and charge their batteries many times over a short period; this can shorten life of the battery. ABB does not recommend such practices and may not honour the warranty on batteries when they are subjected to such harsh operating conditions. Emergency light fittings are designed to be discharge tested once every 6 months as per AS/NZS 2293.2, subjecting the product to repeated discharge or charge cycles is regarded as an abuse of the fittings.

### Troubleshooting guide

If you have installed and connected the fitting as per the instructions listed earlier and it does not function correctly, use the following table as a guide to fixing the problem. Look up the type of fault in the left column and check the possible causes from the right column.

If the fitting still does not work after checking these possible causes, contact ABB customer service in Australia on 1800 60 20 20.

No.	Fault	Possible causes
1	LED lamp and indicator LED not lit	AC supply not connected; <b>or</b> AC supply turned off; <b>or</b> Test switch damaged
2	LED lamp not lit but red indicator is lit	LED lamp damaged; <b>or</b> LED lamp plug incorrectly inserted in the mother board
3	LED lamp not lit but indicator LED is flashing green	LED lamp damaged; <b>or</b> LED lamp plug incorrectly inserted in the mother board
4	LED lamp is lit but red indicator LED not lit	LED damaged; <b>or</b> Check battery connection
5	The LED lamp does not switch to emergency mode when the test button is pressed	Test switch damaged
6	Indicator LED is constant green	Test switch damaged; <b>or</b> Self check fail - return to factory
7	Indicator LED not red after commissioning	Check battery connection and battery plug polarity
8	The LED lamp works momentarily on emergency when the test button is pressed or tested by command from the Nexus system	Battery not yet charged (allow up to 24 hours)

### ABB Australia Pty Limited

For enquiries  
ABB contact centre: 1800 60 20 20  
E-mail: AU-ABB-Stanilite@abb.com

## INSTALLATION MANUAL

# Stanilite® Exit LED edgelit recessed Emergency, Nexus® LX, Nexus RF



### Thank you for choosing ABB product

Please read this document thoroughly before commencing installation and retain for future reference. Contact ABB customer service in Australia on 1800 60 20 20 if you need any assistance. The installation instructions were correct at the time of print. To reflect changes in technology and Australian standards; ABB reserves the right to amend the instructions without notice. Updated document can be found on the Stanilite website.

### Safety warning

In Australia and New Zealand, only licensed electricians are permitted by law to work with 240 volt electrical installations. Do not attempt to install or connect this product unless you are a licensed electrician. Turn off and isolate the electrical supply before connecting this fitting to the building wires. Do not touch the terminals of the terminal block when the light fitting is energised. The only user-serviceable part is the battery pack. LED light source is not user-serviceable. Do not attempt to service other parts of the fitting as this will void the warranty. As the installer, it is your responsibility to ensure compliance with all relevant building and safety codes, (ie: AS/NZS 3000, AS/NZS 2293). Refer to the applicable standards for data and mains cabling installation procedures and requirements. As per AS 60598.2.2:2016 the recessed luminaire classification is CA90.

This document covers	What's inside the box
Safety warning	Recessed base assembly
Installation instructions	Diffuser assembly
Removal instructions	Ceiling cut-out template
Testing precautions	Picto diffuser insert pack
Troubleshooting guide	Mains power cord
	Data plug (for Nexus only)
	Cable ties
	Installation manual
	Warranty information

### Note: Not suitable for use with loose-fill insulation.

No fire rated box is required for the product.

### Important to note:

- This product is designed for indoor use only.

### Nexus LX (data cable system)

The Nexus range of emergency light fittings are designed to be connected together into a special communication network over a level 4 (or higher) high speed, single twisted pair data cable. The Nexus user and technical guide describes all you need to know to successfully install a Nexus project. Ask for it from your supervisor, from your employer or from your nearest ABB product supplier. The network cabling of the building must be installed as per the procedure detailed in the Nexus user and technical guide. No mains or mains carrying cables are to be connected to the data terminals or cables.

### Nexus RF (wireless system)

The Nexus RF range of light fittings are designed to communicate via a proprietary RF network, however the electrical installation of the fittings is identical to that of a standard non-monitored fitting.



## Installation instructions

**Note: The circuit supplying mains power to the fitting must not be energised until installation of the fitting is completed.**

1. Take out the cut-out template (348mm x 97mm) from the packing box; use a pencil to mark the cut-out position on the ceiling. Once the ceiling cut-out is done, remove the face plate, recess the base assembly through the ceiling cut-out (if access to the ceiling cavity is not available, connect the mains power cord and Nexus data cable, secure with the cable ties supplied, before recessing the base in the ceiling cut-out). The Nexus yellow data cable is only connected for the Nexus fitting (part number PLRNXSLED/PLRNXSLEDP). Once recessed in the cut-out, tighten the cam lock screws using suitable size Philips screwdriver or a power driven screwdriver set at minimum torque, turning clockwise (refer figure 1), to secure the product to the ceiling. Connect the mains power cord and Nexus data cable if not connected earlier and secure with the cable ties supplied.

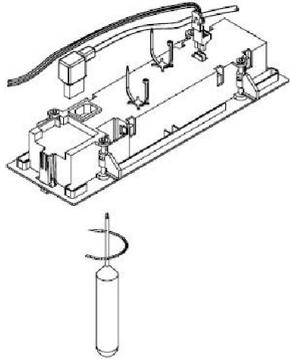


Figure 1: Tight cam lock screw using Philips screwdriver



Figure 2: Product installed in ceiling

2. Once the base is secured to the ceiling, hold the diffuser assembly in your hand and connect the diffuser wire loom polarised plug to the mother board (refer figure 3), the white wires on the plug should be towards the centre of the fitting. Once the plug is connected, lay the wire loom carefully inside the base and place one side of the diffuser in the diffuser holding latch hole and push up the other side of the diffuser, the diffuser clicks and locks in place. Once the diffuser is locked in place, the face plate is easily fixed to the base. Hold the face plate in your hand; make sure that rectangular hole in the face plate for the LED and test switch lines up with LED and test switch in the base. Bring up the face plate close to the base, place the locking tab on one side in the position, the other end locking tab should line up on the correct position. Once both the locking tabs are in the correct position, press gently, till it clicks and locks. Press gently in the middle to lock middle 2 tabs, click sound indicates that tabs are locked in position.


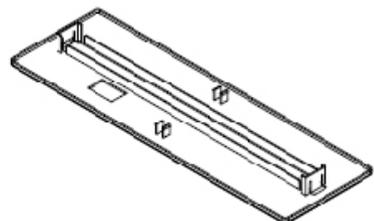


Figure 3: Connect wire loom plug to the mother board

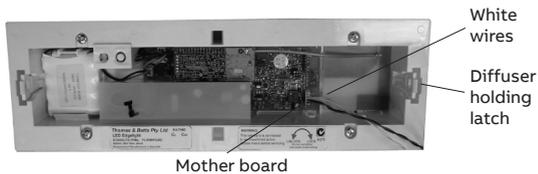

**Important: 24 hours is required to allow the fitting battery to reach full capacity, ie: prior to a discharge test. As the installer, it is your responsibility to conduct the initial discharge testing of the installed fitting. Refer to AS/NZS 2293.**

3. Install the pictograph inserts by sliding into the diffuser. The pictograph inserts can be installed in the diffuser prior to installing the diffuser assembly in the fitting. Fitting is supplied standard with all pictograph insert options for single and double sided, as complete one box solution to meet any site/project needs.
4. The circuit supplying mains power to the fitting can now be energised. Once powered up, in a single point unit red LED lamp should energise and remain lit on mains, until the power supply fails. For Nexus product; the normal initial uncommissioned status of the indicating LED on the fitting is flashing green. Once commissioned, the LED changes to a steady red and flashes red during test when receives command from the Nexus system. Please refer to the Nexus user and technical guide for a full detailed description of all possible LED states and their meanings. The emergency function of the fitting should only operate when the normal lighting power supply fails or when somebody presses the manual test button located on the fitting or when commissioned on the Nexus network and the fitting receives a command from the Nexus controller to switch into emergency mode.
5. Check the operation of the fitting to ensure that the installation was successful. When powered up, allow a few minutes to give the battery a small charge, then press the manual test button located on the fitting. Hold the test button in for a few seconds and observe the operation of the lamp switching from mains to the emergency mode. If the lamp on emergency mode works momentarily, that's okay. Try again in a few more minutes because if the battery was completely discharged, it may take a little time to charge up enough to operate even momentarily. After this time, press the test button again and if the lamp does not work at all, check the supply, the connections and the troubleshooting guide at the end of this document.
6. Once manually checked as per item 4 above, the Nexus fitting is ready to be communication tested and commissioned into the Nexus network and registered in the database. Keep the information details of this fitting including exact location description, DB (distribution board) and CB (circuit breaker) numbering, channel and router numbering, plan number and cross referencing information as all this will be required for entry into the database during commissioning. Refer to the Nexus user and technical guide for full details.

## Removal instructions

1. To remove/uninstall fitting from the ceiling, the steps to be followed are the reversal of installation process. Turn off mains power to fitting, the fitting will automatically switch into emergency mode as the mains power has been turned off. It will stay on the emergency mode until such time as the battery cut-off threshold is reached.
2. Remove face plate, gently insert a small screwdriver into the first slot (first slot is close to the diffuser end) and pull down gently, repeat the same on the other end to remove face plate.
3. To remove diffuser assembly, hold the diffuser holding latch with thumb on one end and push gently to the opposite end to remove diffuser from the holding latch. Once diffuser is removed from the latch, disconnect/remove wire loom plug from the mother board. Once the diffuser assembly is removed, disconnect the battery pack plug from the mother board.
4. Loosen the cam lock screws using suitable size Philips screwdriver or a power driven screwdriver set at minimum torque, turning anti-clockwise. Once the cam lock screws are loosened, the recessed base assembly can be pulled down gently from the ceiling cut-out, pull out the mains power cord and the data cable plug (if Nexus) from the back of base.
5. When the fitting is reconnected to the mains supply, it will need time to recharge its battery before it will be capable of a full length discharge again. The ability of the fitting to operate on emergency is determined by the age, charge level, operating temperature conditions and environmental circumstances of the battery in the fitting.

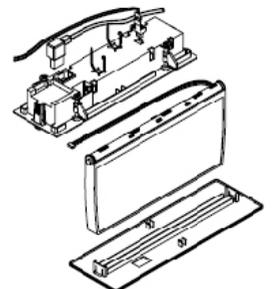


Figure 4